

Adjustable Rack Gap Panel Installation Instructions

Covers Part Number:

10164

The shipping carton contains the complete AisleLok® Adjustable Rack Gap Panel. No additional assembly is required.

SAFETY REQUIREMENTS

The AisleLok® Adjustable Rack Gap Panel attaches between two metal surfaces using strong rare earth magnets. Use extreme caution when handling the powerful magnets. Make sure to keep fingers clear of the contact area between the case magnets and the metal mounting surface.

For proper mounting, the AisleLok® Adjustable Rack Gap Panel magnets must make direct contact with a steel or other ferrous metal surface, e.g. rack side panel, structural column, etc. Any obstruction that prevents the magnets from making direct metal contact will reduce the holding force of the magnets and may cause the AisleLok® Adjustable Rack Gap Panel to fall.



Installation Instructions:

AisleLok Adjustable Rack Gap Panel Assembly


1. Determine the best attachment position for the AisleLok® Adjustable Rack Gap Panel Assembly

The AisleLok® Adjustable Rack Gap Panel is designed to be installed right out of the box without the need of tools.

The AisleLok® Adjustable Rack Gap Panel Assembly can be mounted in a few different ways.

For example:

- a. Case mounted to the right, material drawn to the left, black side facing out (as shown)
- b. Case mounted to the left material drawn to the right, black side facing out
- c. Case mounted to the right, material drawn to the left, white side facing out
- d. Case mounted to the left material drawn to the right, white side facing out

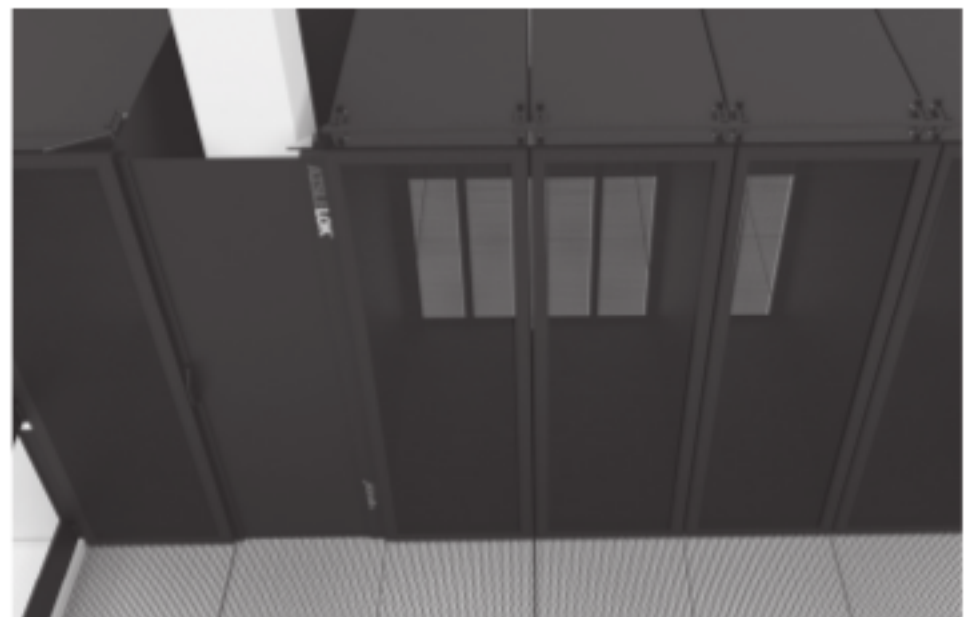

2. Attach the AisleLok® Adjustable Rack Gap Panel Assembly to the side of the cabinet (or other steel surface)

- Remove the AisleLok® Adjustable Rack Gap Panel Assembly from the packaging and stand the AisleLok® Adjustable Rack Gap Panel Assembly up vertically with the graphics facing you and the case side magnets on the right and the handle on the left.
- Position the bottom of the AisleLok® Adjustable Rack Gap Panel Assembly, with the magnets facing the cabinet side panel, against the base of the cabinet side panel (or other steel surface) in the location desired.
- With the bottom of the case touching the cabinet side panel (or other steel surface), slowly pivot the top of the case into position. Keep fingers clear of the contact area as the AisleLok® Adjustable Rack Gap Panel will 'snap' in place, as the magnets take hold.

Make sure the case is plumb and as close to the front of the gap as possible.



3. Extend the retractable material to close off the gap

- With the case magnetically fixed to the side of the metal surface, grab the handle and gently lift up and pull the spring loaded material from the case.
- Continue pulling the material across the gap opening until the magnets in the handle side contact the adjacent cabinet (or other steel surface).
- Adjust the handle side so it is plumb and positioned properly.

Note: To Remove the AisleLok® Adjustable Rack Gap Panel Assembly simply reverse Steps 1–3

To release the handle side of the material from the magnetic attachment, pull sufficiently to overcome the magnet hold.

To release the magnetic hold of the case against the side panel, grab the very top of the case and give a strong tug (only at the top) until you overcome the magnet hold and are able to free the case from the cabinet.

Mounting on non-magnetic surfaces

An optional mounting kit is available from Upsite Technologies for mounting the rack gap filler on non-magnetic surfaces. Please contact sales or visit our website for details. www.upsite.com

Installation Guide

Limited Warranty

Upsite Technologies, Inc. (the *Company*) warrants to the original purchaser that products delivered hereunder will be free of defects in materials and workmanship for a period of twelve (12) months from the date of purchase (the "Warranty Period").

The *Company* shall, at its option, within the Warranty Period, either repair or replace free of charge, any product or part thereof found, upon the *Company's* inspection, to be defective in materials and workmanship, and will return the repaired or replaced product to the purchaser at *Company's* expense.

For warranty service and shipping instructions, contact the *Company* at the telephone number shown below. If the product is under warranty and the defect appears to be covered by this Limited Warranty, the *Company* will issue to the purchaser a Notice of Authorization For Warranty Return. Products returned to the *Company* for warranty service must be accompanied by a statement of defect, the Notice of Authorization for Warranty Return provided by the *Company*, and proof of purchase.

This Limited Warranty is conditioned on the following:

1. The *Company* must be notified within 12 months of purchase and have been given the opportunity of inspection by return of any alleged defective product free and clear of all liens and encumbrances to the *Company* or its manufacturer; and
2. The product must not have been abused, misused, or improperly maintained, and/or non-Upsite authorized repair performed during such period; and
3. Such defect has not been caused by corrosion or exposure to other than ordinary wear and tear; and
4. The installation and use of the product has been in accordance with the manufacturer's instructions and not been modified or customized to include but not limited to cut, resized, burned, glued, bent, re-shaped, disassembled, attachments added to, improperly installed or used in a manner other than intended.

The company makes no other express or implied warranty or representation of any kind whatsoever including any warranty of merchantability or fitness for a particular purpose and all such other warranties are hereby included.

The *Company's* maximum liability hereunder is limited to the purchase price of the product. In no event shall the *Company* be liable for any consequential, indirect, incidental, or special damages of any nature arising from the sale or use of the product, whether based in contract, tort, strict liability, or otherwise.

Note: Some jurisdictions do not allow limitations on incidental or consequential damages or how long an implied warranty lasts, so that the above limitations may not fully apply. This warranty gives specific legal rights and you may also have other rights which may vary from jurisdiction to jurisdiction.

For complete warranty and repair information Call (888) 982-7800 or visit upsite.com

U.S. and International Patents Pending.



AccessFloorSystems.com, Inc.

PO Box 1148

Abita Springs, LA 70420

985.898.0880, 800.868.8606

985.892.8535 fax

www.accessfloorsystems.com,

sales@accessfloorsystems.com

upsite[↑]
technologies®

Designer and Manufacturer

888.982.7800

www.upsite.com